

ENDURA T20 S



Top Cap

Top Filling

. .



510 Threading



Push to Fire 3 clicks on/off

Battery Life Indicator







FULL

LOV

FLIP FOR MORE INFO

REFILLING THE TANK





- 1) Unscrew Top Cap. 2) Fill Against Side of Tank.
- 3) Wait **5** Minutes before Vaping.

CAUTION:

Do not vape if low on eliquid. Stop if there is a burnt taste. Replace the coil if there is a reduction in flavor or vapor.

REPLACE THE COIL



CAUTION:

Make sure there is no eliquid in the tank before removing the coil.

Please refer to User Manual for full operating instructions of WWW.INNOKIN.COM

INNOKIN ENDURA T20 S

