

QUICK REFERENCE GUIDE BATTERY LIFE INDICATOR FULL HALF LOW* SETTINGS AND MODES ADJUST V/W/TEMP, UP HOLD **◆** HOLD ADJUST V/W/TEMP, DOWN PRESS <code-block></code> FOR PRECISE READING: RESISTANCE/VOLTS/PUFF # HOLD O FLIP DISPLAY ORIENTATION HOLD (७) ↔ MODE SELECT (Ni/Ti/SS/W) HOLD 🙆 🖨 ADJUST RAMP UP WATTAGE IN TO MODE SUPPORT facebook.com/Innokin.Technology



QUICK START GUIDE

- Attach & Fill the iSub-B Tank.
- Power on the Kroma-A. [3x Power]
- Press [+] 4x to Select [W] Wattage Mode. Press [Power] to Select.
- Hold the [+] Button until the Wattage Flashes.
- Use [+] [-] Button to set Wattage. iSub-B Plex3D .35Ω [30 55W].

Check Coil for Resistance(Ω)and Wattage Range.

instagram.com/innokintechnology

twitter.com/innokintech
reddit.com/r/innokin

support@innokin.com

- Start low and increase wattage to preferred heat and flavor.
- Do not exceed recommended Wattage or the coil may be damaged.
- Adjust iSub-B Airflow to your preferred draw.
- Press the Power Button to Vape & Enjoy!
- *Power Off the Kroma-A when not in use.

Read the Battery Safety Guide for important information.

If you have any questions please write to support@innokin.com.

INSTRUCTION

1 ATTACH TANK

UNSCREW CAP AND TOP FILL
PLEASE WAIT 5 MINUTES FOR COIL TO SATURATE.

