

## ADJUSTING THE WATTAGE

Click the power button twice continuously. When the power value on the screen starts to blink, click the power button to select the required watt value.

After the watt value is selected, wait for two seconds to exit the power setting.

## CHARGING

- Charge promptly based on battery level.
- Use the provided charging cable and a standard output charger with the correct charging current and voltage range.

## CAUTIONS

- Turn the device off when not in use to avoid depleting the battery and minimize excess battery wear.
- Do not leave the charging device unattended.
- Protect the device from direct sunlight, dust, moisture, or mechanical shock.
- Avoid dropping, throwing, or mishandling the device to prevent damage.
- Keep the device away from any water, liquid, or flammable gas.

## SPECIFICATIONS

Dimensions:  $\phi 29 \times 100.2$  mm

Capacity: 4.5 ml

Coils & Recommended Wattage:  
PZP Coil 0.6 $\Omega$  (18-24W); PZP Coil 1.2 $\Omega$  (10-13W)

Output Power: 6.0-25.0W

Built-in Battery Capacity: 1300mAh

Charging Current: DC 5.0V / 0.75A

Button-activated: Hold the power button to start vaping

## PROTECTIONS

### No Load / High Resistance Protection

When no load resistance or high resistance is detected, the screen will display "---" and flash.

### Short Circuit Protection

When low resistance is detected, the screen will display "---" and stay on for 5 seconds.

### Auto-Shut Off Protection

If the power button is held for 10 seconds, the screen will display "----" and flash 10 times.

### Overheat Protection

When the PCBA (Printed Circuit Board Assembly) temperature sensor detects high temperature, the screen will display "----" and flash 3 times, then 3 times again.

**Manufacturer:** Shenzhen Innokin Technology Co., Ltd.

**Address:** 1st-5th Floor, Building 6, Xinxintian Industrial Park, Xinsha Road, Shaer Community, Shajing, Baoan District, 518104, Shenzhen, China.

**Telephone:** +86 755 2989 8770

**Email:** info@innokin.com

**Production License:** 5144030162

ISO 9001 / 14001 / 45001, ISO 13485, and cGMP Certified.

**MADE IN CHINA**

European Representative:

FRANCE VAPOTAGE DISTRIBUTION

57 impasse de la Ferme Cardon

Rue de la Croix Bougard 59810 LESQUIN France

Telephone: +33 320020152

Email: guillaume.vilain@innokin.fr

KEEP OUT OF REACH OF CHILDREN.




INNOKIN®

ZYON


User manual

## COMPONENTS

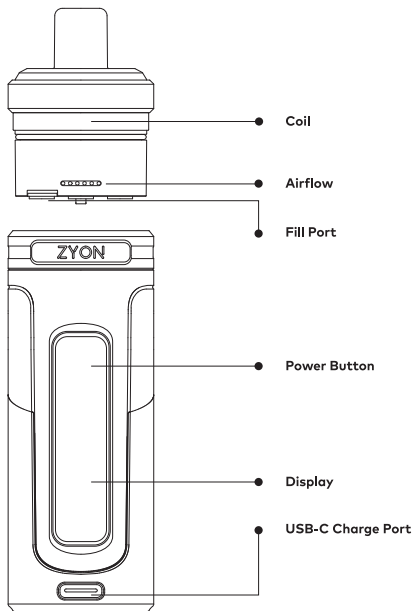

## FILLING THE POD

Pull the tab to open and add E-liquid.

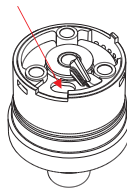


## IMPORTANT

- Wait for at least five minutes after filling to allow the new coil to saturate with E-liquid.
- You can also manually prime your coil by placing three drops of E-liquid into the coil.
- Keep the pod from going completely empty of E-liquid. Refill it regularly to avoid dry hits or coil damage.

## CHANGING THE COIL


When you experience a burnt taste or a decrease in flavour and/or vapour production, it's time to change the coil.

- 1 Pull and remove the old coil.
- 2 Prime and install a new coil in its place.

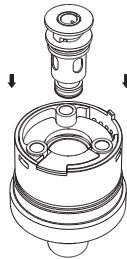

## ADJUSTING THE AIRFLOW

Turn the pod to customize the airflow to achieve your desired draw.

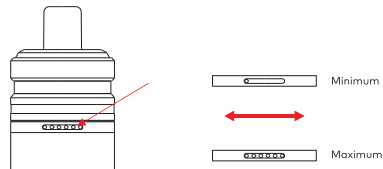

## POWER ON/OFF THE DEVICE

Click the power button three times continuously to turn the device on or off.

## INTERFACE

