If you have any questions, contact support@innokin.com

Manufacturer: Shenzhen Vapewell Technology Co., Ltd.

Address: 3rd Floor, Building 10, Xinxintian Industrial

Rue de la Croix Bougard 59810 LESQUIN France

Park, Xinsha Road, Shaer Community, Shajing,

Baoan District, 518104, Shenzhen, China,

FRANCE VAPOTAGE DISTRIBUTION

Telephone: +86 755 2768 5365 Production License: 5144030172

European Representative:

Telephone: +33 320020152

MADE IN CHINA

ISO 9001 and ISO 14001 Certified.

57 impasse de la Ferme Cardon

Email: auillaume.vilain@innokin.fr

f facebook.com/Innokin.Technology

reddit.com/r/innokin

1. THIS PRODUCTS INTENDED FOR USE BY ADULTS OF LEGAL SMOKING AGE (18+ OR HIGHER), THIS PRODUCT IS NOT instagram.com/innokintechnology RECOMMENDED FOR NON-SMOKERS, YOUNG PEOPLE UNDER THE AGE OF 18 YEARS, PREGNANT OR BREAST FEEDING WOMEN AND THOSE EXPERIENCING GENERAL ILL HEALTH twitter.com/innokintech

WAYS POSSIBLE.

2. THIS PRODUCT MAY BE USED WITH E-LIQUIDS THAT CONTAIN NICOTINE, IF YOU ARE USING E-LIQUID CONTAINING NICOTINE PLEASE REFER TO THE INFORMATION PROVIDED IN SECTION. "IMPORTANT INFORMATION ABOUT USING NICOTINE CONTAINING F-LIQUIDS" OR CHECK WITH YOUR F-LIQUID PROVIDER FOR MORE INFORMATION.

SAFETY GUIDELINES AND WARNING:

PLEASE READ THIS SECTION CAREFULLY TO ENSURE YOU

ENJOY VAPING WITH IT IN THE MOST SAFE AND EFFECTIVE

RECEIVE MAXIMUM BENEFITS FROM THE PRODUCT AND

3. THIS PRODUCT IS ONLY DESIGNED TO BE USED WITH HIGH QUALITY E-LIQUID. IT IS NOT INTENDED FOR USE WITH LOOSE TOBACCO LEAF OR HERBAL SUBSTANCES, INNOKIN IS NOT RESPONSIBLE FOR ANY ATOMIZER OR BATTERY DAMAGE DUE TO THE USE OF LOW QUALITY E-LIQUID, DRY HERB, OR OTHER MATERIALS FOR WHICH THIS PRODUCT WAS NOT DESIGNED

4. THIS PRODUCT IS NOT INTENDED TO TREAT, MITIGATE, PREVENT OR CURE ANY DISEASE OR CONDITION. IT IS NOT INTENDED FOR USE AS A SMOKING CESSATION DEVICE.

5. ALWAYS KEEP THIS PRODUCT OUT OF REACH OF CHILDREN AND PETS.

6, DO NOT MISUSE, MISHANDLE OR STORE THIS PRODUCT IMPROPERLY, IN ORDER TO PROLONG THE OPERATION OF THIS PRODUCT, PLEASE DO NOT USE, PLACE OR STORE IT IN

EXCESSIVELY HOT OR COLD ENVIRONMENTS. 7. DO NOT ATTEMPT TO REPAIR THE PRODUCT BY YOURSELE AS DAMAGE OR PERSONAL INJURY MAY OCCUR.

8. THIS PRODUCT IS NOT WATERPROOF, KEEP IT DRY AT ALL TIMES.

9. DO NOT ALLOW ANY LIQUIDS OR E-JUICE TO ENTER THE DEVICE THROUGH THE TOP THREADING OR THE USB PORTS, IF ANY LIQUIDS ENTER THE DEVICE, OR COME INTO CONTACT WITH THE PCB. PLEASE DISCONTINUE USING OR CHARGING THE DEVICE AND CONTACT YOUR LOCAL AUTHORIZED INNOKIN VENDOR IMMEDIATELY.

10. INNOKIN IS NOT RESPONSIBLE FOR BATTERY AND CHARGER EXPLOSIONS, OR MALFUNCTIONS, DUE TO THE USE OF A LOW-QUALITY CHARGER, ONLY USE THE ORIGINAL MICRO USB CABLE TO CHARGE THE DEVICE, WE RECOMMEND THAT YOU USE A HIGH QUALITY USB WALL CHARGER (CE/UL CERTIFIED)

11. THIS PRODUCT IS NOT DESIGNED FOR USE WITH A CAR. CHARGER, THIS PRODUCT DOES NOT COME INCLUDED WITH A CAR CHARGER

12. OBEY LOCAL LAWS OR REGULATIONS REGARDING ELECTRONIC CIGARETTES WHEN VAPING IF YOU ARE IN AN AREA WHERE THERE ARE ANY BANS OR POTENTIAL DANGERS, PLEASE DO NOT USE THIS PRODUCT

IMPORTANT INFORMATION ABOUT USING NICOTINE-CONTAINING E-LIQUIDS

BEFORE USING NICOTINE-CONTAINING E-LIQUIDS THE USER SHOULD READ THE FOLLOWING INFORMATION CAREFULLY.

DO NOT USE NICOTINE-CONTAINING E-LIQUIDS: · If you are alleraic to nicotine or any of the other ingredients

contained in the e-liquid (see manufacturer's label for full details)

WARNINGS AND PRECAUTIONS

NICOTINE-CONTAINING E-LIQUIDS ARE NOT RECOMMENDED FOR

· Those experiencing general ill health; such as heart disease, stomach and duodenal ulcers, liver or kidney problems, long term throat disease or difficulty breathing due to bronchitis, emphysema or asthma.

· Those who have an overactive thyroid aland or have a phaeochromocytoma (a tumour of the adrenal aland that can affect high blood pressure)

· Those who have diabetes, as nicotine may affect your blood sugar levels · Those taking the following medication

· Theophylline (to treat breathing problems)

· Ropinirole (to treat restless leas) · Clozapone (to treat schizophrenia)

IF YOU INHALE TOO MUCH NICOTINE OR USE THE PRODUCT TOO MUCH YOU MAY EXPERIENCE ONE OR MORE OF THE FOLLOWING

EFFECTS: Feeling faint Nausea (feeling sick)

 Irritation in the mouth or throat Stomach discomfort

 Headache Nasal congestion Chest palpitations Coughing Dizzines Hiccups

· Vomiting (being sick) Abnormal heart rate

If you experience any of the above side effects including any possible side effects not listed in this user manual, discontinue using the product, if the effect(s) continue after you stop use, consult your doctor or healthcare professional and bring this leaflet to their attention.

Nicotine is highly addictive; and is therefore intended for adult smokers

HOW TO STORE AN ELECTRONIC CIGARETTE

Always power off the electronic cigarette when it is not being used. or when it is going to be stored, store the electronic cigarette in room temperature (5°c to 30°c) in a clean dry place, keep the product out of sight and reach of children and animals.

HOW TO DISPOSE OF AN ELECTRONIC CIGARETTE

The electronic cigarette contains a rechargeable battery which should be recycled in a designated waste disposal site. Please dispose of your electronic cigarette responsibly with consideration to the

SHENZHEN INNOKIN TECHNOLOGY CO., LTD.

Building 6, Xinxintian Industrial Park, Xinsha Road, Shajing, Baoan District, 518104, Shenzhen, China

Telephone: +86-755-2989-8770 Email: info@innokin.com

INNOKIN TECHNOLOGY GMBH

Fritz-Neuert-Straße 17, 75181 Pforzheim, Deutschland E-Mail: info@innokin.de

BATTERY CARE GUIDE

READ BEFORE USE!

INTERNAL BATTERY

- ◆ Do not leave device unattended while charging.
- ★ Keep a charge of more than 10% to maximize battery lifespan.
- ♦ Only charge with a high quality Wall Adapter and stable power source with included micro-USB cable.
- ◆ Do not use with a car charger.
- ♠ Do not leave device charging for extended periods of time, Stop charging when the battery is full.
- "Vape-while-charging" must be used with +10% battery charge.
- ★ Carefully insert the micro-USB plug correctly. Do not use force or the port may be damaged.
- ★ Check with your airline before flying with your vaporizer.

BATTERY CARE GUIDE

READ BEFORE USE! REPLACEABLE BATTERY

- # Buy only high quality batteries from a trusted source.
- Only use a high quality Battery Charger.
- ♠ Do not leave batteries unattened while charging, Remove battery when fully charged.
- ♠ Always store batteries safely in a silicone sleeve when not in use.
- ♠ Do not remove the battery wrap.
- f If the battery wrap is damaged, replace battery immediately.
- f the wrap is discolored, replace battery.
- Do not use damaged batteries.


Batteries must always be stored in a protective sleeve or case when placed in a pocket or bag.








Components



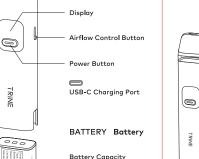

Indicator

DEVICE Control

Fill and Install the Pod

1. How to fill

Remove the black mouthpiece to reveal the top-fill section and add e-liquid.

Important

- · Wait for at least five minutes after filling to allow the new pod to saturate with E-liquid.
- . Keep the pod from going completely empty of E-liquid, Refill it regularly to avoid dry hits or coil damage.
- 2. Insert the magnetic pod into the device.



Adjusting the Airflow

Adjust the girflow control for your desired draw.

Power On/Off the Device

Press the power button three times within two seconds.

Installing and Removing the Battery

To remove the battery, pinch the snap joint on both sides and pull the battery downward. If you need to replace the battery, simply push the new battery into the device.

Home Screen





Puff Time

While vaping, the duration of your current draw will be displayed in seconds.

25.0₩

Adjusting the Wattage · Double-click the power button to enter adjustment mode. When the power value

flashes, click the power button to select the upward wattage value; it will loop from maximum to minimum. . Press and hold the button again to enter the quick adjustment model · Wait for five seconds to exit the wattage setting.



EcoDrain™ (Self-discharging Mode)

While off, connecting the device to a charger and pressing the button 10 times quickly will make the device entire self-discharge mode. While in this mode a recycling symbol will be shown on the display.

Charging

- . Charge promptly based on battery level. Do not allow the battery to stay under 10% or above 90% for extended periods.
- Use a standard output charger and charging cable with the correct charging current and voltage range.
- . Charging pauses when vaping and resumes when the button is let go.

Caution

- · Turn the device off when not in use to avoid depleting the battery and minimize excess battery wear.
- Avoid dropping, throwing, or mishandling the device to prevent damage.
- Protect the device from direct sunlight, dust, moisture, or mechanical shock.
- · Keep the device away from any water, liquid, or
- flammable aas. . Keep the contents of this package out of reach of
- children, non-smokers and animals,
- Do not leave the device charging while unattended.
- . Do not use it if pregnant or breast feeding.
- · Warning: Do not use this product if you suffer from heart disease, severe hypertension, diabetes, stomach ulcers or have a history of seizures.

EEE Recyclina

This product is meant to be disposed of in an approved e-waste receptacle or recycling bin. Do not throw it away in standard waste receptacles.

Specifications

Dimensions: 110.93×25.86×15.57 mm

Capacity: 2mL

Pod: Coil 0.6Ω (20-22W) /0.8Ω (12-14W) /1.2Ω (11-14W)

Output Power: 6.0-25.0W

Built-in Battery Capacity: 1000mAh

Chargina Current: DC 5.0V/1.0A

Draw-activated Vape/ Button-activated Vape

Protections



Low Battery Protection If the battery voltage is too

low before or during vaping, the screen will display "LOW VOLT" and red light will flash



No Load / High Resistance Protection

When no-load resistance or high resistance is detected, the screen will display "COIL CHECK" and green light will



Short Circuit Protection

If low resistance is detected before vaping, the screen will display "LOW RES" and stay on for 5 seconds. If low resistance is detected while vaping, the screen will display "COIL SHORT" and stay on for 5 seconds.



Auto-Shut Off Protection

If the power button is held for 10 seconds, the screen will display "TIME OUT" and flash 10 times.



Overheat Protection

When the PCBA (Printed Circuit Board Assembly) temperature sensor detects a high temperature, the screen will display "HIGH TEMP" and flash 3 times, then 3 times again.

WARRANTY CARD

CUSTOMER INFORMATION

Full Name Mailing Address Email Telephone Number

PRODUCT INFORMATION

Product Name Product Serial Number Product Authentication Number

I certify that the above information is true. I agree to the terms and conditions of Innokin Technology's Warning Service Program and Privacy Policy.

INNOKIN TECHNOLOGY provides a 90 day after sales service warranty to all authorized vendors. Please consult the official Innokin website (www.innokin.com) or your Authorized Innokin Technology Vendor for more information and terms of service. The proof of purchase and the original box are needed for the 90 Day Limited Warranty.



VERIFY YOUR INNOKIN PRODUCT



INFORMATION

Print Name

Date

Signature